



### SPACE REQUIREMENTS AND PLANNING GUIDE

#### Width Measurements

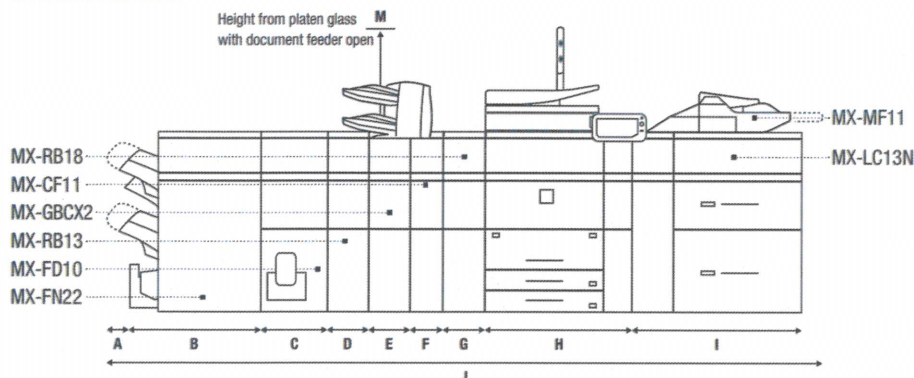

#### Depth Measurements (overhead view)

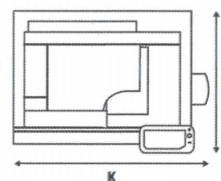

A	5"
B	30-1/4"
C	13-1/4"
D	8-3/8"
E	16-3/4"
F	6-1/2"
G	8-3/8"
H	34-3/8"
I	35-3/8"
J	150-3/4"
K	33-1/4"
L	33-1/4"
M	23-1/4"

Note: In addition to the above dimensions, allow three feet of space on all sides for consumable replenishment, paper jam removal, and maintenance and service procedures. Images may not be to scale.

#### Installing Dealer

Read this document in its entirety before planning your configuration.

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.


- Verify dedicated power source and check for stability. The MX-M905 Document System requires a 208-240 VAC, 60 Hz, 20 Amp power source.




The MX-M905 main unit requires one 208-240 VAC, 20 Amp power source.




The MX-FN21, MX-FN22 and MX-LC13N options each require separate 120 VAC, 15 Amp power sources.

- Confirm that you have the latest firmware available from [www.sharp-pcservice.com](http://www.sharp-pcservice.com) to upgrade your MX-M905 Document System immediately.
- Some accessories require a product key for operation. You should obtain the accessory Application Code and machine's serial number to register the product key online prior to arrival at the customer location.
- Check to see if My Sharp™ online training is set up  for the end-user.
- Verify that the customer has enough supplies on-hand to complete a large rush job. After-hours printing and/or holiday work may take place following an installation. See Supplies & Accessories list on the following page.

Measurements with MX-FN21, MX-FN24, MX-FN25, MX-SL10N and MX-RB18.

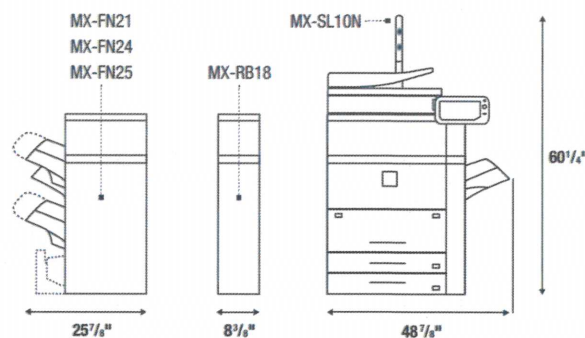


Base Unit Measurements Shown with MX-LC12 or MX-LC3N.

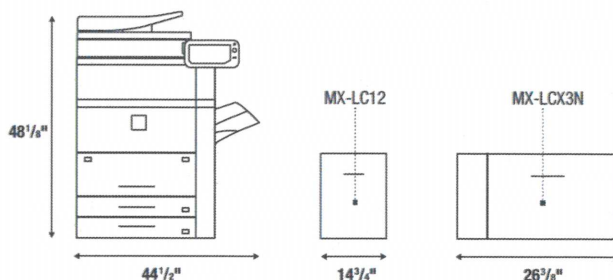

Illustrations shown are for measurement purposes only and may not be to scale. For configurations see subsequent pages.

### STEP 1: CHOOSE PAPER FEED CONFIGURATION

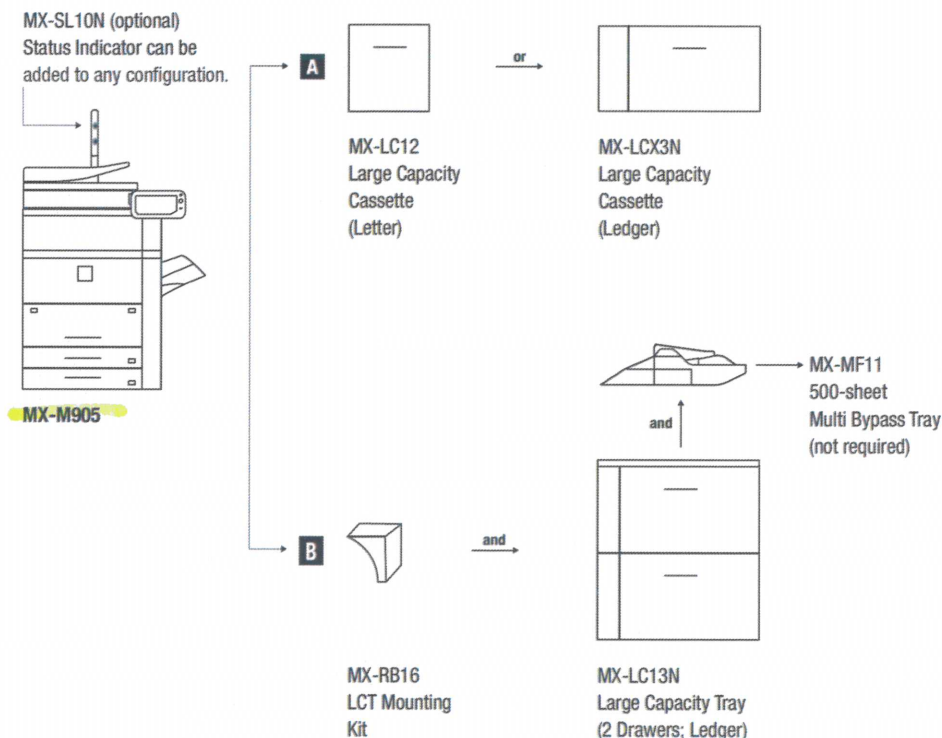


#### Configuration A

**A** These items cannot be combined with items from paper feed configuration **B**.

#### Configuration B

**B** This configuration requires the MX-RB16 and MX-LC13N. The MX-MF11 can also be added to the MX-LC13N, but cannot be used alone. These items cannot be combined with items from paper feed configuration **A**.

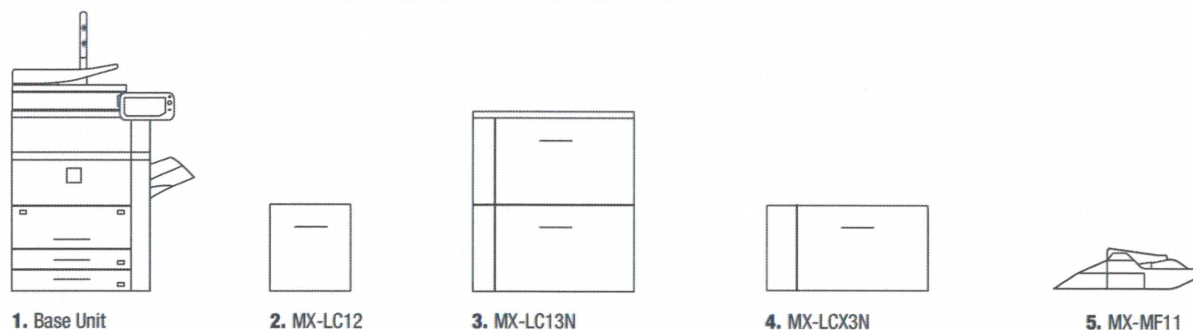

#### Supported Paper Weights

##### 1. Base Unit

Upper Drawer (tandem): 16 lb. bond to 28 lb. bond  
Middle/Lower Drawer: 16 lb. bond to 100 lb. bristol  
Bypass Tray: 15 lb. bond to 110 lb. cover

##### 2. MX-LC12

16 lb. bond to 100 lb. bristol

##### 3. MX-LC13N

Upper/Lower Drawer: 15 lb. bond to 110 lb. cover

##### 4. MX-LCX3N

16 lb. bond to 110 lb. bristol

##### 5. MX-MF11

15 lb. bond to 100 lb. bristol

#### Supplies & Accessories

- Toner Cartridge
- Developer
- Drum
- Waste Toner Bottle

MX-900NT  
MX-900NV  
MX-850NR  
MX-850HB


- 120V/15A Power Filter (for MX-FN21, MX-FN22 and MX-LC13N)
- 208-240V/20A Power Filter

AR-D5133NT  
MX-E524ZNT

### STEP 2: CHOOSE FINISHING CONFIGURATION


#### Configuration A: 50-sheet Staple Finishing

- A** This configuration requires the MX-FN24 or MX-FN25.  
The MX-FN24 cannot be used with the MX-FN25.  
The MX-PN13B can be added, but cannot be used alone.

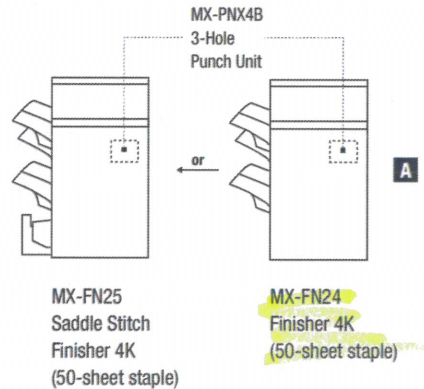


#### Configuration B: 100-sheet Staple Finishing

- B** This configuration requires a finisher and the MX-RB18.  
The MX-FN21 cannot be used with the MX-FN22.  
These items cannot be combined with items from configuration A.

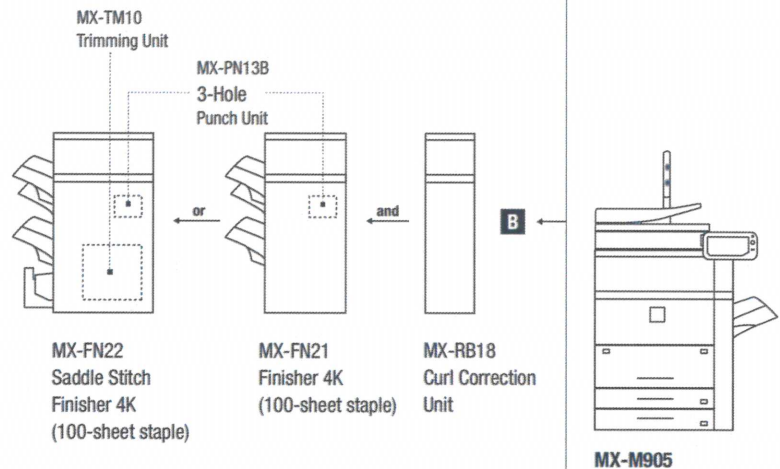


#### Configuration C: Advanced 100-sheet Staple Finishing

- C** This configuration requires the MX-RB18 and the MX-FN21 or MX-FN22.
- The MX-CF11, MX-GBCX2, and the MX-FD10 are all optional.
  - The MX-GBCX2 requires the MX-RB13.
  - The MX-RB13 is required to connect a 100-sheet finisher and MX-CF11.
  - The MX-FN21 cannot be used with the MX-FN22.
  - The MX-SL10N Status Indicator can be added to any configuration.

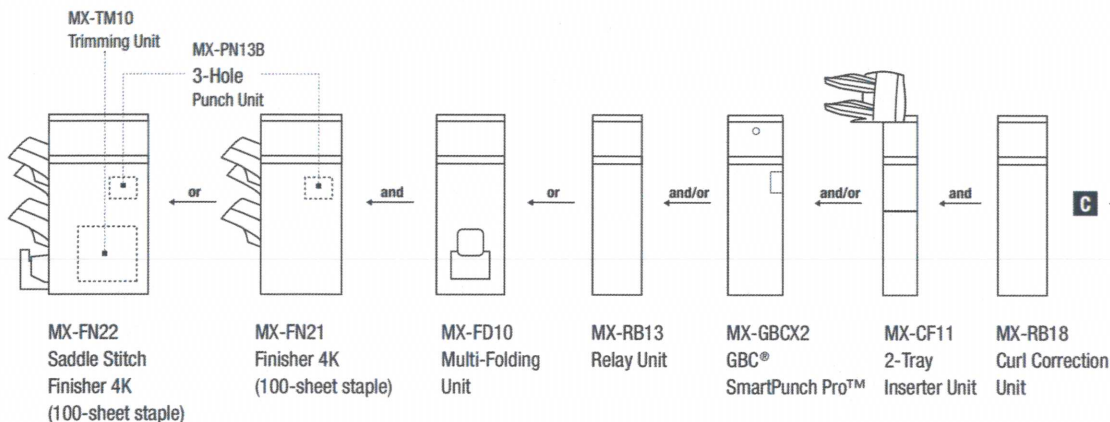



### STEP 3: SELECT CONNECTIVITY COMPONENTS

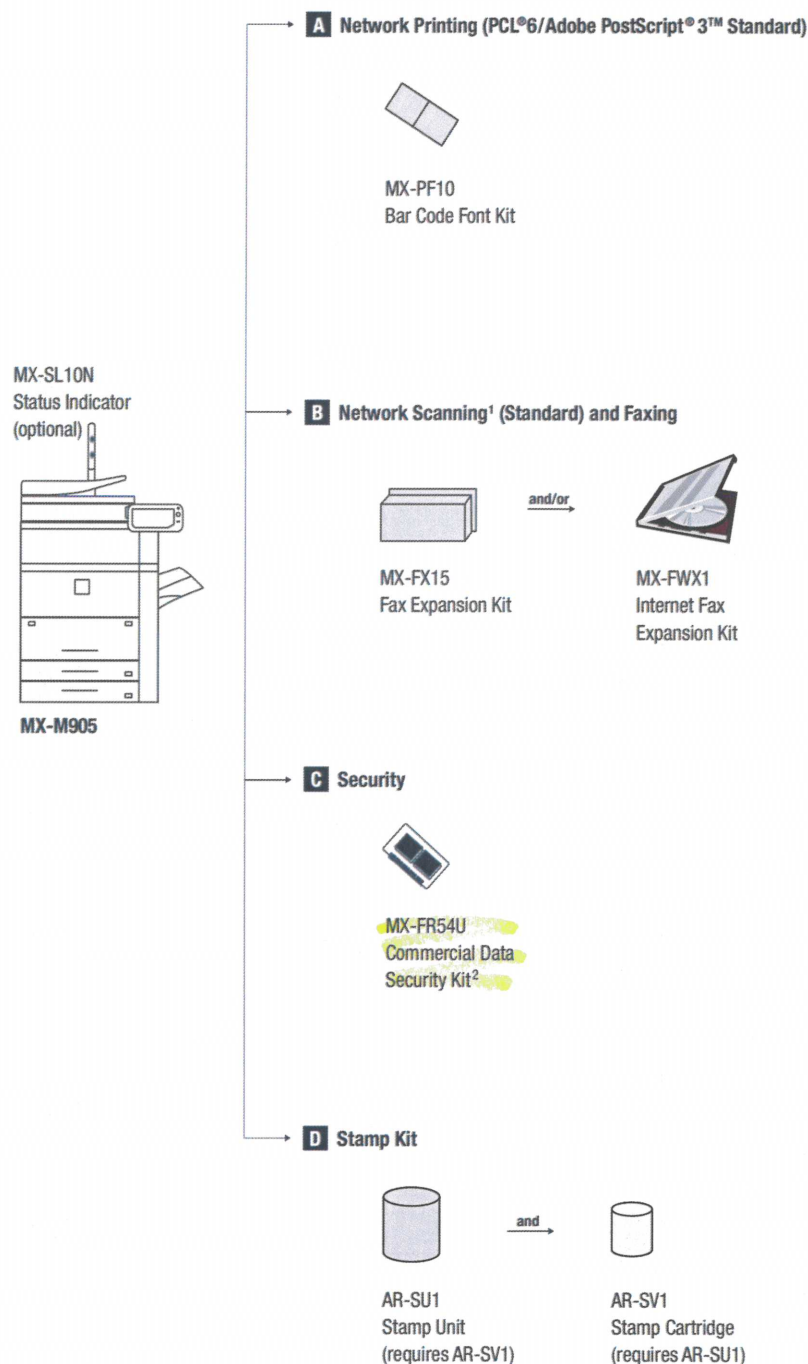

¹ Sharpdesk® license upgrade kits are also available, see price list.

² See price list for availability dates.

Design and specifications are subject to change without notice. All product dimensions listed are approximate.