


# SPACE REQUIREMENTS AND PLANNING GUIDE

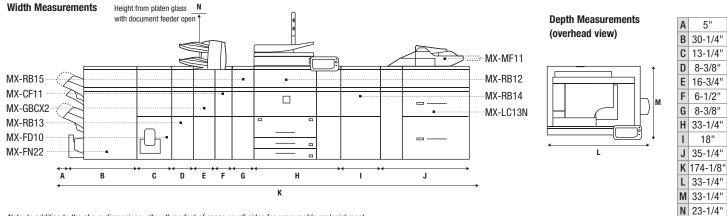

Note: In addition to the above dimensions, allow three feet of space on all sides for consumable replenishment, paper jam removal, and maintenance and service procedures. Images may not be to scale.

### **Installing Dealer**

#### Read this document in its entirety before planning your configuration.

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.

 Verify dedicated power source and check for stability. The MX-6580N/7580N Document Systems require a 208-240 VAC, 60 Hz, 20 Amp power source.



The MX-6580N/7580N main unit requires one 208-240 VAC, 20 Amp power source.




The MX-FN21, MX-FN22 and MX-LC13N options each require separate 120 VAC, 15 Amp power sources.


- Confirm that you have the latest firmware available from www.sharp-pcservice.com to upgrade your MX-6580N/7580N Color Document Systems immediately.
- Some accessories require a product key for operation. You should obtain the accessory Application Code and machine's serial number to register the product key online prior to arrival at the customer location.
- Check to see if My Sharp™ online training is set up for the end-user.




Verify that the customer has enough supplies on-hand to complete
a large rush job. After-hours printing and/or holiday work may take
place following an installation. See Supplies & Accessories list on
the following page.

Illustrations shown are for measurement purposes only and may not be to scale. For configurations see subsequent pages.

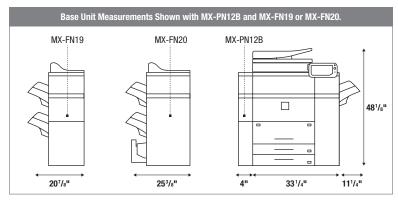


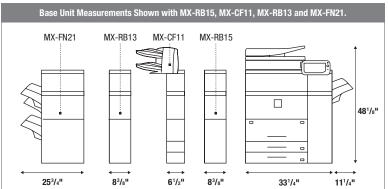

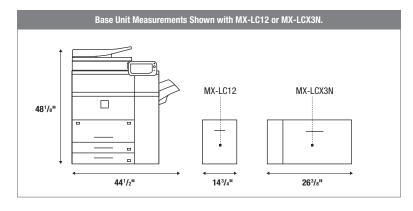



## STEP 1: CHOOSE PAPER FEED CONFIGURATION

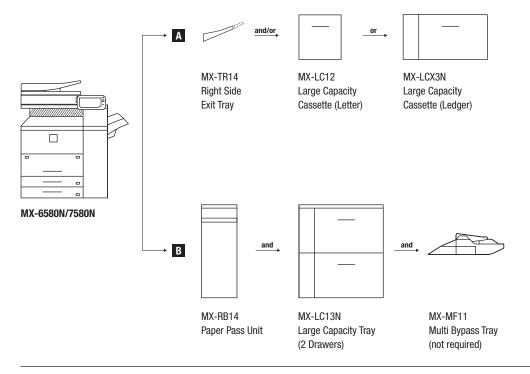

#### **Configuration A**

A The MX-MF10 bypass tray is standard. The MX-TR14 is not required. The MX-LC12 cannot be used with the MX-LCX3N. These items cannot be combined with items from paper feed configuration B.

### **Configuration B**


B This configuration requires the MX-RB14. The MX-MF11 can also be added, but cannot be used alone. These items cannot be combined with items from paper feed configuration A.







2. MX-LC12

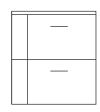

3. MX-LC13N



4. MX-LCX3N



5. MX-MF11

### **Supported Paper Weights**

- 1. Base Unit Upper Drawer (tandem): 16 lb. bond to 28 lb. bond Middle/Lower Drawer: 16 lb. bond to 100 lb. bristol Bypass Tray: 15 lb. bond to 110 lb. cover
- 2. MX-LC12 16 lb. bond to 100 lb. bristol
- 3. MX-LC13N Upper/Lower Drawer: 15 lb. bond to 110 lb. cover
- 4. MX-LCX3N 16 lb. bond to 110 lb. bristol
- 5. MX-MF11 15 lb. bond to 100 lb. bristol

#### **Supplies & Accessories**

• Black Toner Cartridge MX-62NTBA Cyan Toner Cartridge MX-62NTCA • Magenta Toner Cartridge MX-62NTMA Yellow Toner Cartridge MX-62NTYA MX-62NVBA · Black Developer • Cyan/Magenta/Yellow Developer MX-62NVSA

• Drum

• Toner Collection Container

• 120V/15A Power Filter (for MX-FN21, MX-FN22, and MX-LC13)

• 208-240V/20A Power Filter

MX-62NRSA MX-700HB

AR-D5133NT


MX-E524ZNT



## STEP 2: CHOOSE FINISHING CONFIGURATION


### **Configuration A**

A The MX-TU14 must be installed if no finishing options are selected. This item cannot be combined with items from other finishing configurations.

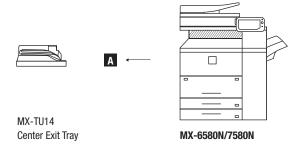


### **Configuration B**


B These configurations require the MX-RB12 and a finisher, but do not require the MX-PN12B. The MX-FN19 cannot be used with the MX-FN20. These items cannot be combined with items from other finishing configurations.

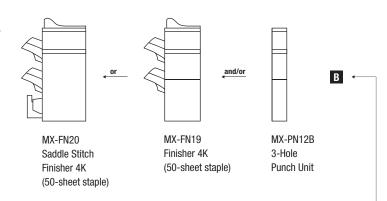

### **Configuration C**

- C This configuration requires the MX-RB12, the MX-RB15 and the MX-FN21 or MX-FN22.
  - The MX-CF11, MX-GBCX2, and the MX-FD10 are all optional.
  - The MX-GBCX2 requires the MX-RB13.
  - The MX-RB13 is required to connect a 100-sheet finisher and MX-CF11.
  - The MX-FN21 cannot be used with the MX-FN22.

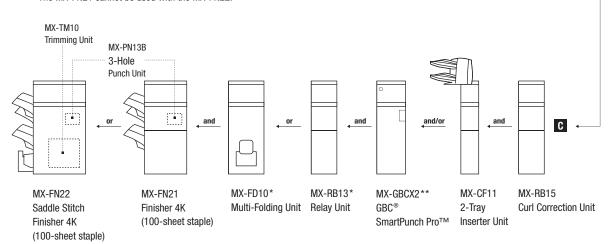

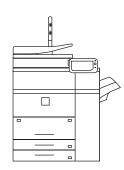

#### MX-6580N/7580N


+ MX-RB12 + MX-SL10N
Paper Pass Unit
(required for Configurations
B and C). The MX-SL10N
Status Light can be added
to any configuration.

<sup>\*</sup>A Relay Unit or Multi-Folding Unit is required to connect a Finisher and 2-Tray Inserter Unit directly.

<sup>\*\*</sup>A Relay Unit is required to connect the GBC Smart Punch Pro



# STEP 3: SELECT CONNECTIVITY COMPONENTS

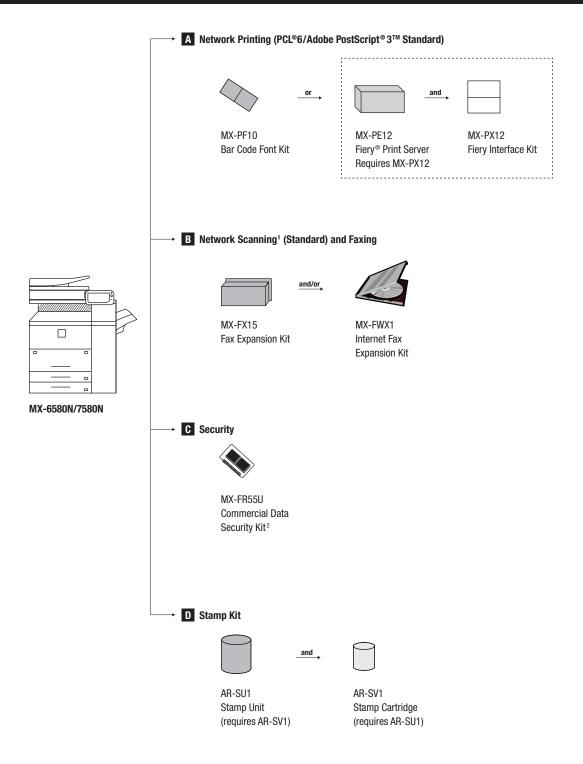

¹ Sharpdesk® license upgrade kits are also available, see price list.

Design and specifications are subject to change without notice. All product dimensions listed are approximate.

<sup>&</sup>lt;sup>2</sup> Not available at time of launch.